

# Access restriction from certain interfaces

Since build [5.2.795](#) it is possible to listen CLI port from certain interfaces only with the following parameter in [flashphoner.properties](#) file

```
cli.address=localhost
```

By default, CLI is accessible from local interface only. Interface addresses can be comma separated

```
cli.address=localhost,192.168.0.100
```

In this example, access is allowed from local interace and from internal network.

To apply settings, WCS should be restarted.

